


Application Note

How do I choose the right test leads?

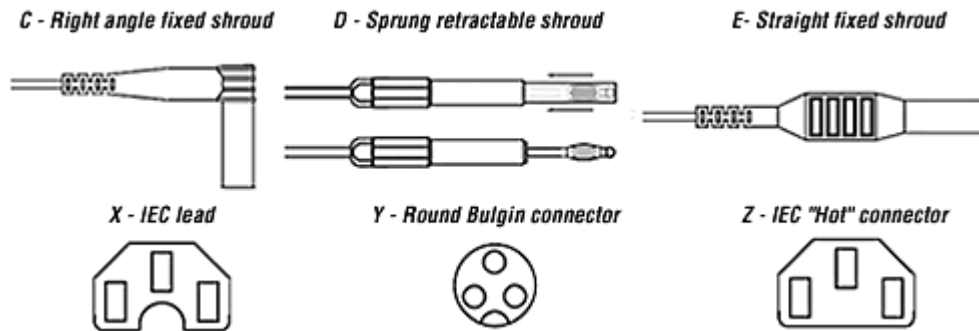

Choose the type of probes and / or croc clips you need. Do you require fused leads for extra safety? Then select the appropriate fittings to connect to your meter.

C end fits most modern multimeters including MM series, Fluke 10, 70 & 80 series. Best suited to meters with sockets on front panel. D end fits many older multimeters and insulation testers.

E end fits most modern insulation testers or multimeters with sockets in the top of the unit rather than on the front panel. They can be used in place of 'C'.

Call 01923 441717

www.martindale-electric.co.uk